

# FlameDisk Display Setup

1



Remove the white base from header box. Open the base as shown.

2



On the upper half of the base, fold the four side flaps down. Next fold the front flap down and in. Insert the side tabs into the slots.

3



At the bottom of the base, interlock the four base support tabs into each other.

**Important: This will ensure the base properly supports the weight of the header box. Failure to do so could damage the product.**

4



Next, open the flaps on the header box and place the box on the base as shown, wrapping the flaps behind the box.

Insert the two side tabs on the header box that connect the header box to the base. Lastly, insert the bottom flap into the base.